
PO Box 16124


Shawnee Mission, KS 66203


Installation Instructions for GLH - Glass Door Hood

- 1. The glass door hood mounts over the glass door frame.
- 2. There needs to be 3 inches from the top of the glass door frame to the glass door opening.
- 3. Remove all protective film from the hood.
- 4. Loosen the glass door so that the hood will slip over and behind the door. Re-tighten glass door once hood is in place.
- 5. The hood can be permanently attached to the glass door frame using the self-tapping screws included with the hood. You may wish to drill a 1/8" pilot hole in the glass door frame.
- 6. Wipe hood with a soft polishing cloth to remove any fingerprints.

1 1/4"

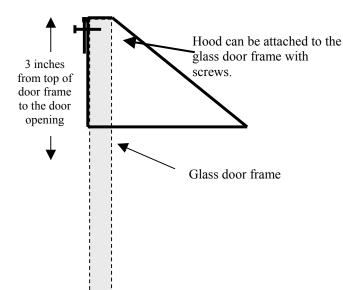



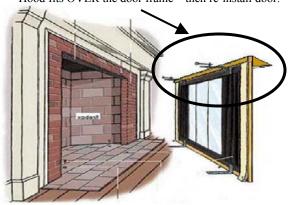

WARRANTY

Elite Fireplace Facings, Inc. makes no warranty, either expressed or implied, regarding its facings or hoods, and especially does not warrant its fitness for any particular purpose or merchantability. No officer, employee, agent, representative, or distributor of Elite Fireplace Facings, Inc. has the authority to change or modify this warranty either orally or in writing. Elite Fireplace Facings, Inc. shall not be liable for any incidental or consequential damages arising or alleged to have arisen by the use or installation of this product.